## **Installation Instructions**



Brother TN 200/300/500

## For Technical Support, please call Memphis, TN at (888) 757-0762 or Nashua, NH at (888) 833-5727.



## **Compatibility Information:**

Type TN 200, TN 250, TN 300, TN 500 & TN 8000 Toner Cartridge for use in Brother Fax 4550/4650 Series; Fax 8000/8050/8060/8070/8200/8250/8650 Series; HL 720/ 730/760 Series; HL 820; HL 1020/1040/1050/1060/1070 Series; MFC P 2000 Series; MFC 2750; MFC 4350/4450/ 4550/4650/4800 Series; MFC 6550/6650/6800 Series; MFC 7550/7650 Series; MFC 9000/9030/9050/9060/9070/9160/ 9180/9500/9550 Series; DCP 1000; Intellifax 2800/2900/ 3800 Series.

Oasis Product: BRTN30100

- **1.** Turn off the machine. Open the top cover.
- 2. Remove the drum unit from the machine by holding each side of the drum unit by its handles and gently lifting upward.
- 3. Gently turn the toner cartridge lever toward the front of the drum unit until it stops.
- 4. Remove the used toner cartridge by gently sliding it out of the drum unit. Dispose of the used toner cartridge properly.
- 5. Gently shake the new toner cartridge side-to-side five to six times.
- **6.** Remove the protective seal tape.
- 7. Install the new toner cartridge into the right-hand-side of the drum unit, aligning the guide bar on the toner cartridge with the guide slot in the drum unit.

© 2004 Oasis Imaging Products, Inc.

- **8.** Lock the new cartridge in place by gently turning the toner cartridge lever toward the back of the drum unit until it stops.
- 9. Reinstall the drum unit into the machine.
- **10.** Close the top cover. Turn on the machine.

## **Oasis and You ... Succeeding Together!**



New Hampshire (603) 880-3991 (800) 322-8992 Fax: (603) 598-4277

Illinois (630) 982-1543 (888) 658-4555 Fax: (630) 928-1542 **Tennessee** (901) 433-0334 Fax: (901) 366-9756

**California** (714) 283-6270 (888) 656-9555 Fax: (714) 283-6276 **Texas** (972) 671-1307 (888) 591-3555 Fax: (972) 671-1359

North Carolina (919) 776-0847 (866) 399-8558 Fax: (919) 776-0898 **Canada** (905) 568-3422 (800) 430-7886 Fax: (905) 568-3491

Europe Netherlands 011-31-24-388-2233 Fax: 011-31-24-355-7373

© 2004 Oasis Imaging Products, Inc. Any attempt to reproduce any part of these instructions without the written consent of Oasis Imaging Products, Inc. may result in legal action. All registered trademarks are the property of their respective owners.

© 2004 Oasis Imaging Products, Inc.

Page 2 of 2